




## PLI Support Guide: R10 Firmware Updates

**Summary:** This guide will show you how to perform R10 firmware updates.

1. Go to [www.trimble.com/Support/Support\\_AZ.aspx](http://www.trimble.com/Support/Support_AZ.aspx). Scroll to "*Trimble R10*" and go to "*Downloads*" and select "*Trimble R10 Firmware*." Select the firmware you want to install and download it.

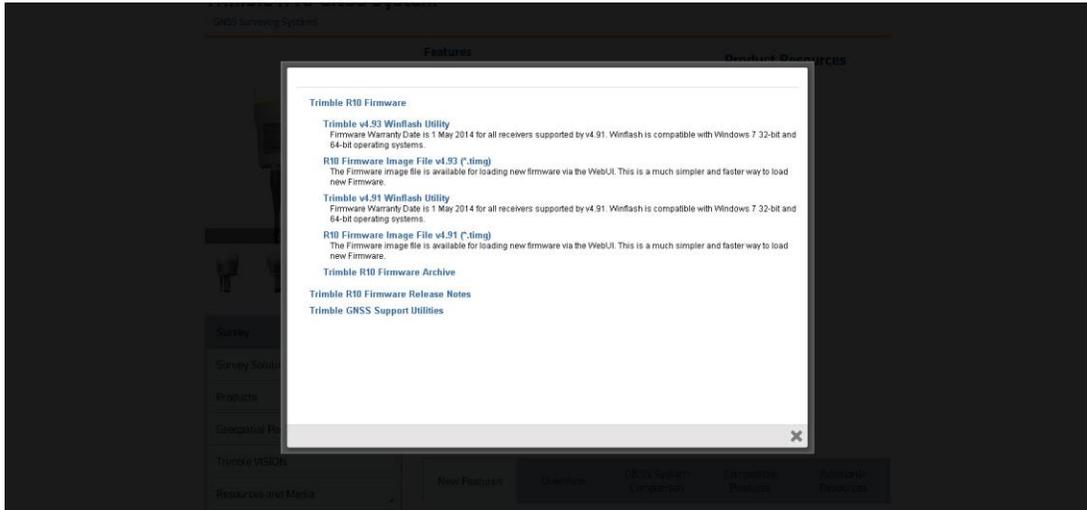


2. Run the program you downloaded; it will be called "*WinFlash Utility*." Select the "*Trimble R10*" under receiver type as well as the correct serial port that the R10 is connected to and click "*Next*."






3. Select "Load GPS Software" and click "Next."

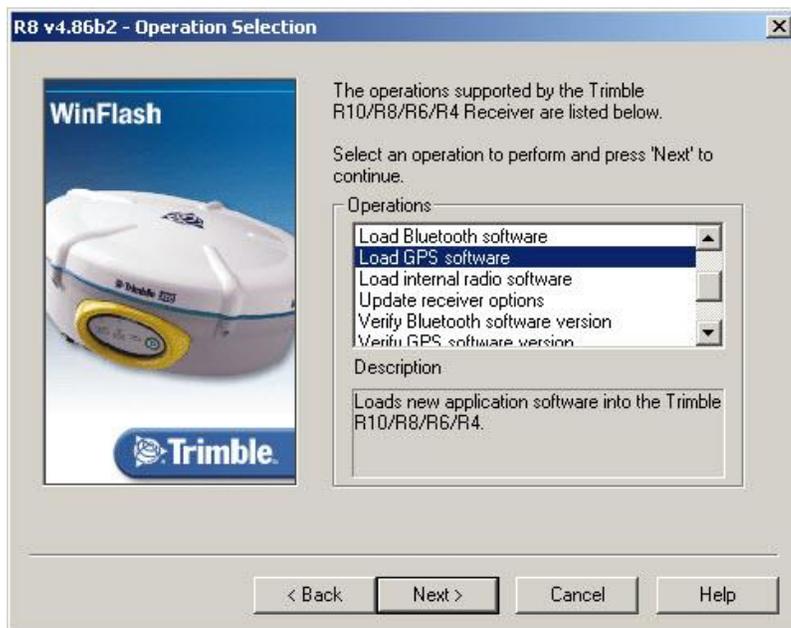


4. Select the proper firmware version to install and click "Next."

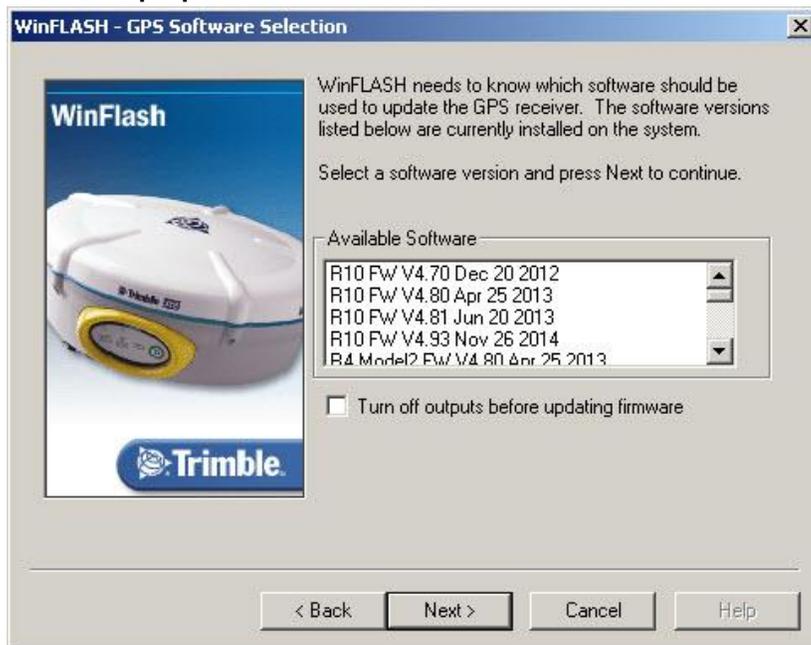



5. After you click "Next," you will get a procedure screen telling you what will happen. When you click "Finish," you will get a notification that all the data stored on the rover hard will be removed.

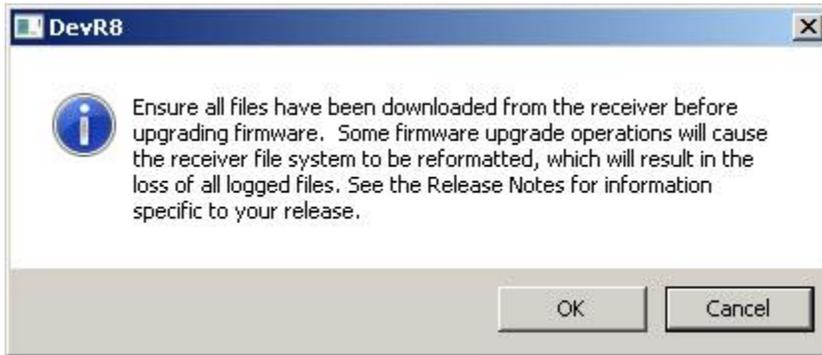

6. Once the update is finished, you will be notified. Click "Exit" to quit the WinFlash Utility and the firmware update is complete.

